








# SiT6702DM

## QUICK START GUIDE

### Package Contents for SiT6702DM Evaluation Board

Item	Image
SiT6702DM	
I <sup>2</sup> C interface cable <sup>1</sup>	 <p>Orange - 5 Yellow - 4 Green - 3 Blue - 2 Violet - 1</p> <p>5 4 3 2 1</p> <p>5 4 3 2 1</p> <p>5 - Yellow 4 - Orange 3 - Violet 2 - Green 1 - Blue</p>
I <sup>2</sup> C/SPI interface cable <sup>2</sup>	 <p>5 4 3 2 1</p> <p>5 4 3 2 1</p> <p>5 - Orange 4 - Yellow 3 - Green 2 - Blue 1 - Violet</p>
OE control cable	 <p>2 1</p> <p>2 1</p> <p>2 - White 1 - Black</p>
Power supply cable	 <p>2 1</p> <p>3 2 1</p> <p>3 - Red 2 - Brown 1 - NC</p>

<sup>1</sup> For connection with SiT6722EB/SiT6722SEB

<sup>2</sup> For connection with SiT6712EB

# Quick Start

---

1. Download the **TimeMaster™ software** at:  
[www.sitime.com/sites/default/files/gated/TimeMaster\\_rev.1.0.msi](http://www.sitime.com/sites/default/files/gated/TimeMaster_rev.1.0.msi)
2. Download the **SiT6702DM user manual** for details on board and software usage at:  
[www.sitime.com/sites/default/files/gated/SiT6702DM-User-Manual.pdf](http://www.sitime.com/sites/default/files/gated/SiT6702DM-User-Manual.pdf)
3. Install the TimeMaster software.
  - a. TimeMaster software will run on Windows 7 and Windows 10.
  - b. TimeMaster software requires .NET Framework 4.5 or higher to be installed on the PC.
4. Connect the SiT6702DM board to the PC with a USB Micro Type B connector (X1).
  - a. Windows will install all needed drivers automatically.
5. Connect one of the SiT6722EB/SiT6722SEB/SiT6712EB boards with SiTime device on it.
6. Launch the TimeMaster software.



Download  
**TimeMaster**  
software



Download  
**SiT6702DM**  
user manual